




US-1100 Windlass Tensioner

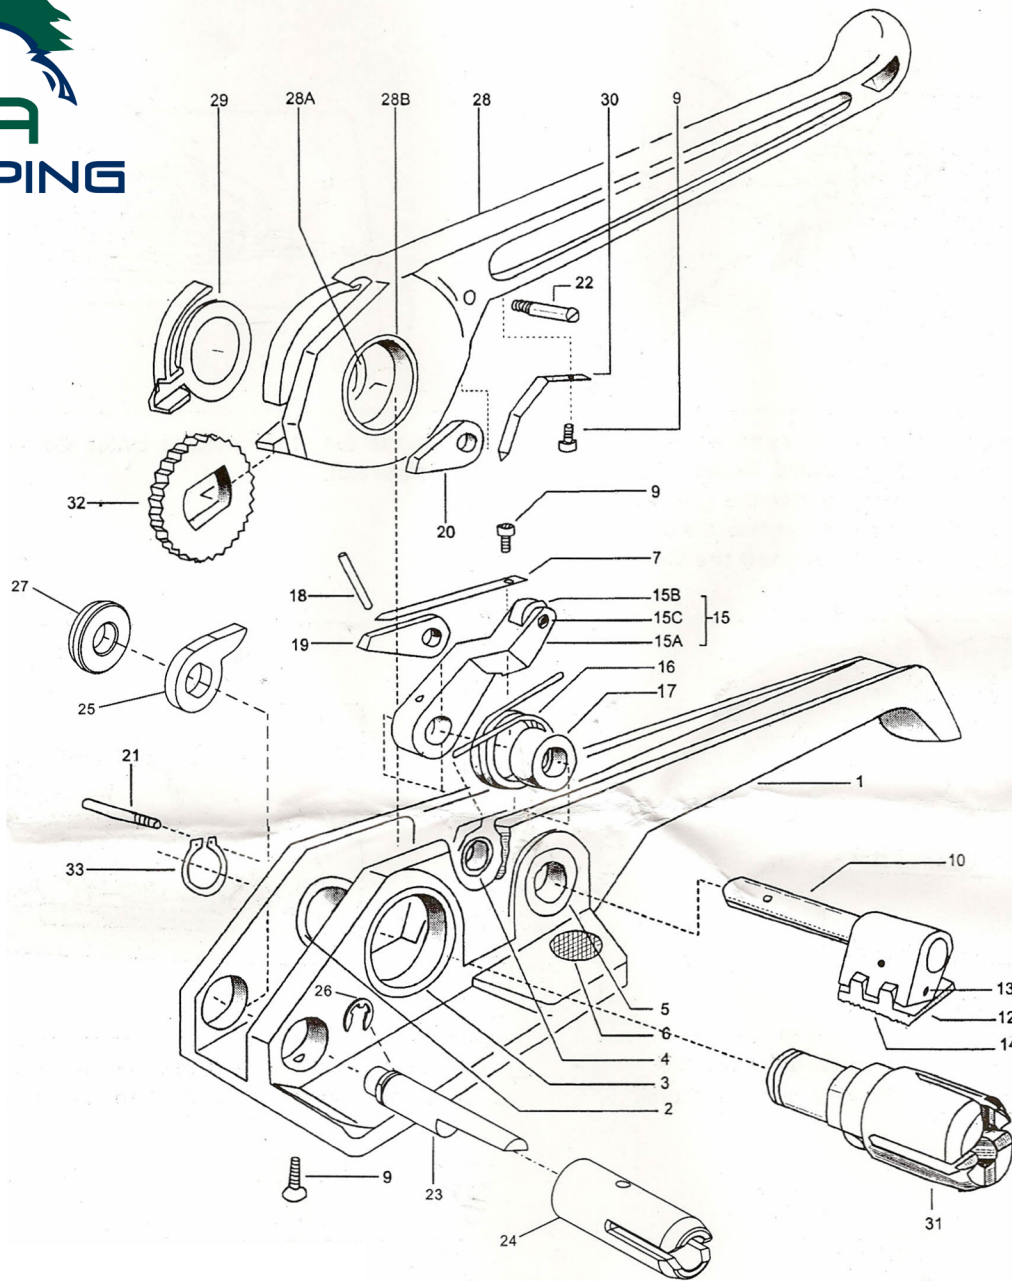

PARTS LIST

Part No.	Part Name	Qty./ Tool	Part No.	Part Name	Qty./ Tool	Part No.	Part Name	Qty./ Tool
#1	Base	1	#15	Lever Release Assembly	1	#27	Cutter Blade Bushing	1
#2	Small Bushing (Base)		#16	Main Spring	1	#28	Handle	1
#3	Big Bushing (Base)		#17	Main Spring Bushing	1	#28A	Small Bushing(Handle)	
#4	Small Leg Bushing		#18	Spring Pin	1	#28B	Big Bushing(Handle)	
#5	Big Leg Bushing		#19	Base Toggle	1	#29	Nose Hook	1
#6	Base Plug	1	#20	Handle Toggle	1	#30	Handle Spring	1
#7	Base Toggle Spring		#21	Base Shaft	1	#31	Windlass	1
#9	Screw	3	#22	Handle Shaft	1	#32	Ratchet Wheel	1
#10	Leg	1	#23	Cutting Blade	1	#33	Clip Spring	1
#12	Foot	1	#24	Cutting Housing	1			
#13	Foot Screw	1	#25	Blade Lever	1			
#14	Foot Spring	1	#26	Circlip	1			

Keep tool well oiled and clean. Please order parts by number and name